

1. GET STARTED - LASER



POWER

Press to turn ON, press and hold to turn OFF.



MENU

Press Menu button to enter or exit features. Use D-PAD and OK button select features.



LEVEL

 
Changes the leveling mode the laser is currently in.

- Level
- Slope
- Manual Slope Mode




SETTING GRADE


1. Press **GRADE** to start editing values.

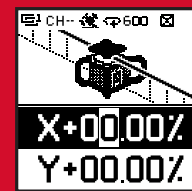

 
2. Use **D-PAD** to change values.

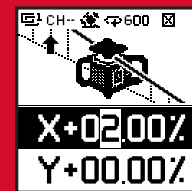

 
3. Press **GRADE** to change between axes.

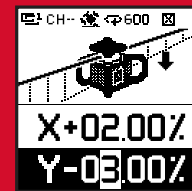

 4. Press **OK** to confirm values.

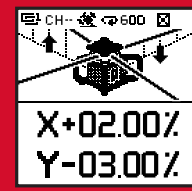

 2. RECEIVER & REMOTE CONTROL MENU NAVIGATION

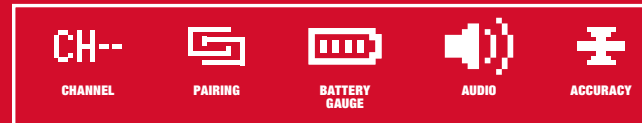

RECEIVER



MENU

Press MENU to switch between feature list and readout.



GRADE MATCH

Initiates grade match sequence.



REMOTE CONTROL



MENU

Press MENU to view feature list or use to exit current feature without saving.



GRADE

Access grade features menu.

3. FEATURES

 


PAIRING

Used to pair the laser with receiver/remote. Laser and receiver/remote kit will already be paired.


RECEIVER and **LASER**: Place receiver into pairing mode then the laser. Press **MENU** **BUTTON** to toggle to pairing mode and D-PAD to select ON. With the receiver press **OK** to initiate pairing. The pairing icon in the status bar will **FLASH** while it searches for a pair. Select the **PAIRING FEATURE** from the menu on the **LASER**. Select "+Add Device." When paired, laser will show a **"PAIRED"** graphic on the screen and the laser and receiver will make an audible tone.

REMOTE CONTROL and **LASER**: Enter pairing mode and select "+Add Device." Repeat process on the laser. Once paired, both laser and remote will show a "PAIRED" graphic on the screen and the laser will make an audible tone.

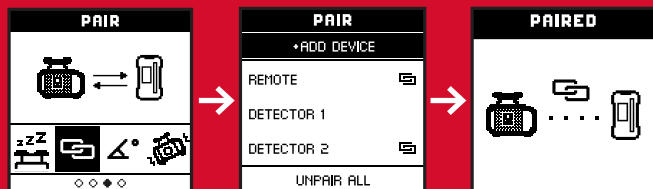

BUMP SENSITIVITY

 Laser defaults to High Sensitivity. The setting can be switched to Low Sensitivity with a paired remote control.

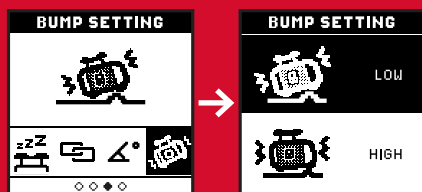

MASK

Use the **D-PAD** to mask desired quadrants where the laser will be hidden.



Note: Only adjacent quadrants can be masked. Only 3 total quadrants can be masked at any time.



 
SWEEP

Different sweep angles can be selected between 10°, 45°, 90° and dot mode.



CHANNEL LINK

Channel link can be used to eliminate interruptions from other lasers by only detecting devices on the same channel.

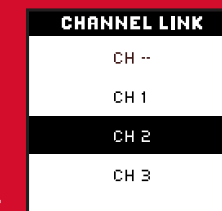

On **RECEIVER** press **MENU** to toggle to channel link use **D-PAD** to select channel. Press **OK** to confirm.

 
On **REMOTE CONTROL** or **LASER**: Select "Channel Link." Select desired channel.

Note: Changing channel on laser will update channel on all paired devices.



ALIGNMENT

Manually align or slope the laser line with remote or laser's D-PAD.

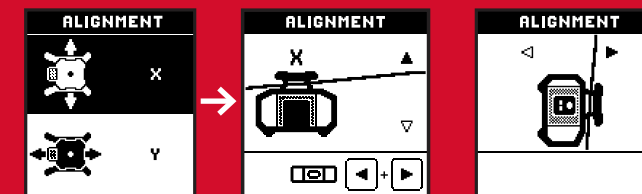

Select axis to perform alignment

Use the **D-PAD** to move laser up or down along the X or Y axis. To reset back to level, press the **LEFT & RIGHT** on the **D-PAD** simultaneously.

To adjust vertical alignment, place the laser in the vertical orientation.



QUICK START GUIDE



Red Exterior Dual Slope Rotary Laser Level Kit w/ Receiver & Remote

M18
3704-21

ONE KEY COMPATIBLE

TRACK AND MANAGE.

